


OVISLINK

Call Center Headset OVHS072-OSD

(Compatible with Siemens / Unify OpenScape & OpenStage Series Desktop Phones)

User Manual

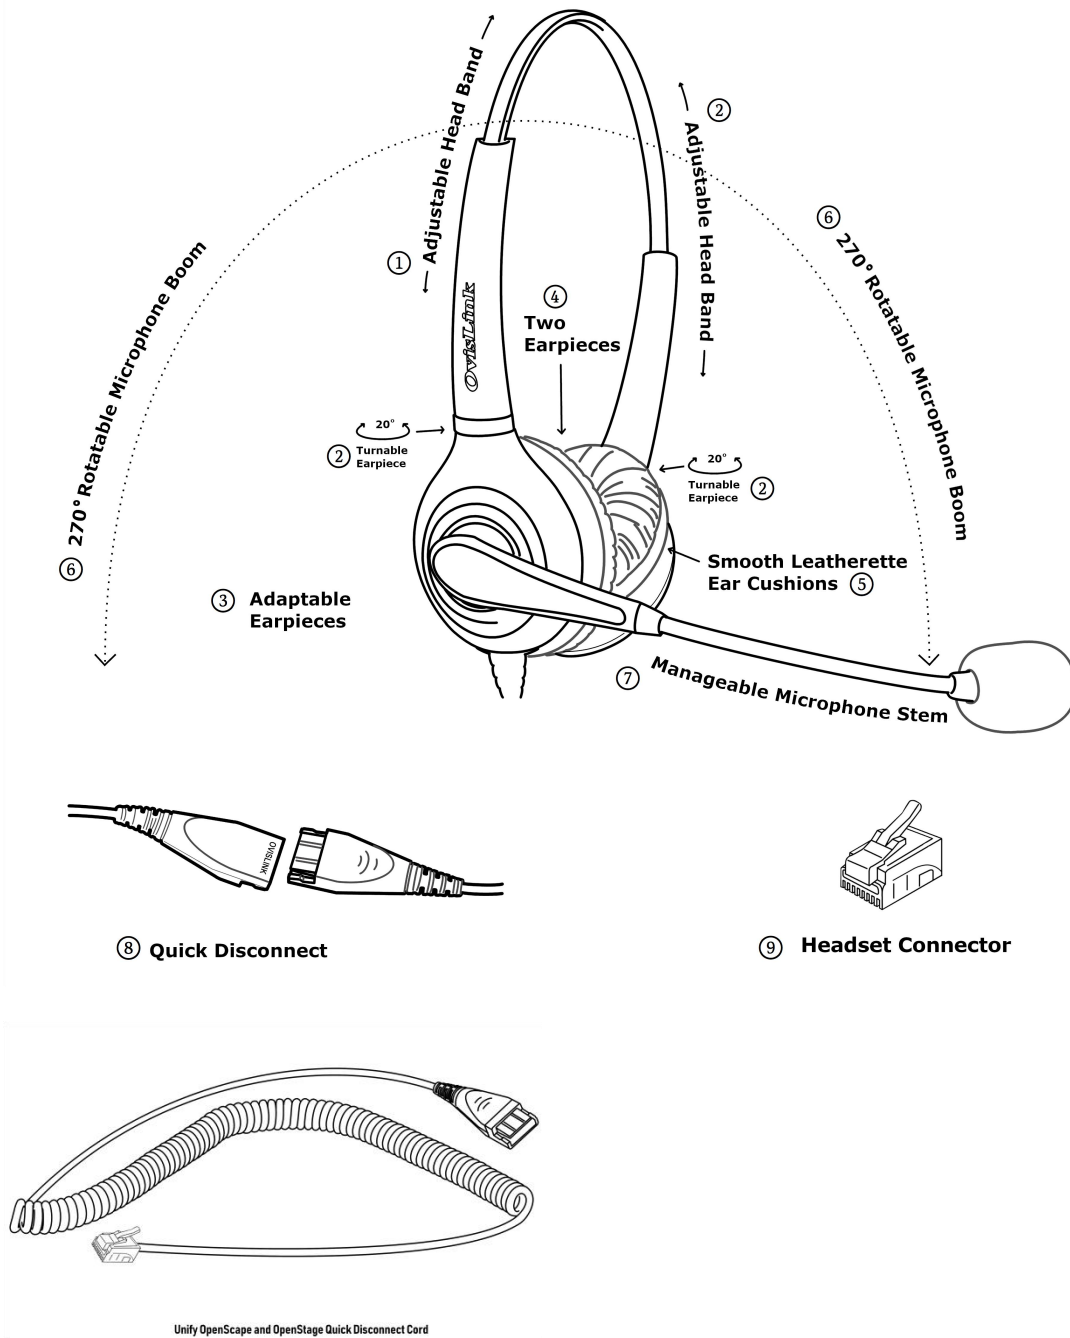

Package Contents:

1 Unit of OvisLink Dual Ear Headset

1 Unit of OvisLink Quick Disconnect Cord for Siemens / Unify OpenScape & OpenStage Series Desktop Phones


Features:

- 1) Adjustable Headband - Headband adjusts to the desired length and stays in position.
- 2) Turnable Earpieces - Earpieces can be turned within 20° to fit with user's ears.
- 3) Adaptable Earpieces – Earpieces adapt to the user's ears moving up and down to align with user's head and ear structure for comfort.
- 4) Two Earpieces - Two earpieces on user's both ears help user focus on phone conversation.
- 5) Soft, Smooth Leatherette Ear cushion - Very smooth leatherette ear cushion lets user feel comfortable for long periods of time.
- 6) Rotatable Microphone Boom - Microphone boom can be rotated 270°, user may place the headset speaker on the left or right ear anytime as he/she wants.
- 7) Manageable Microphone stem - Microphone stem is manageable. User may adjust the microphone to the desired spot and it will stay in place.
- 8) Quick Disconnect - The headset cord can be disconnected at the middle, just simply unplug it. Unplugging on and off will not drop the call.
- 9) Register Connector - One Quick Disconnect cord with register connector that connects the headset directly to Siemens / Unify OpenScape & OpenStage Series Desktop Phones' headset jack.
- 10) Clothing Clip – User can clip the headset cord to his/her shirt for stability using the clothing clip.
- 11) Tangle-less headset cord - The headset cord is tangle-less, will not twist even use it for long time.
- 12) Long headset cord - Upper cord + Coiled Quick Disconnect cord is about 5 ft long and can be stretched to 7 ft.


Instruction:

1. Connect the **Quick Disconnect Cord** and connect it to back of the phones as picture below:


OpenScape 35G & 55G

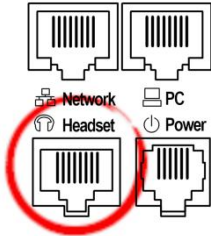

OpenScape CP200/205/400/600/600E

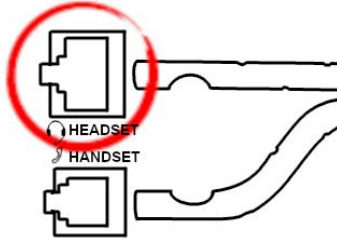

OpenStage 30/40/60/80

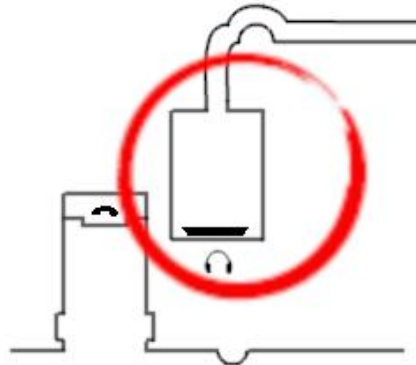


2. Adjust the length of the headband and turn the earpieces slightly until the headset fits comfortably.
3. Rotate the microphone boom to put the microphone in front of the mouth.
4. To optimize the position of the microphone, adjust the microphone stem in either direction so the microphone is close to the corner of your mouth and the white dot at the microphone should be facing to your mouth.
5. Attach the clothing clip at a comfortable level to keep the headset properly positioned and free from the cord's weight.
6. Press the headset key on the telephone keypad to get dial tone to the headset, answer an incoming call and disconnect call.


Location of the headset key on different Unify phone models may be different.

Unify OpenScape and OpenStage Headset key location


OpenScape 35G & 55G

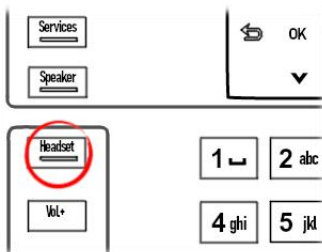


OpenScape CP Models

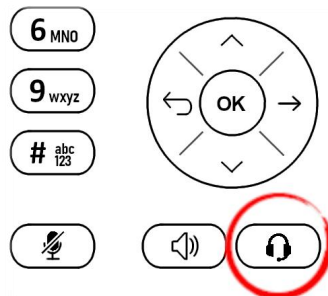

OpenStage Models

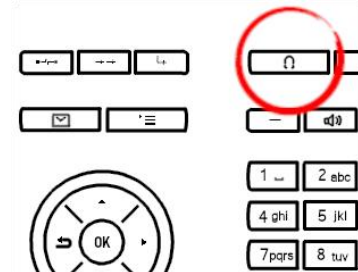

7. For your convenience; if you need to disconnect the headset from the phone, just pull the Quick Disconnect connector at the middle of the headset cord to disconnect. It will not drop the call even if you're in a phone conversation. Plug it back to continue the conversation.

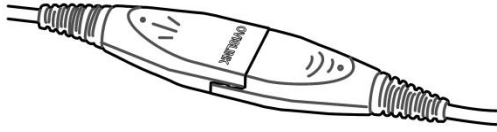

*** OvisLink headset model OVHS084-OSD is special designed for Unify OpenScape and OpenStage Series phone models. If you have other telephone brand or any problem, please contact OvisLink at support@ovislink.com